



TKTC6GB Universal Remote Control Owner's Manual

Manual del Propietario (parte posterior)

Step 1: Charge the remote

Before you start using the remote, it's a good idea to charge it completely.

To charge the remote:

1. Plug the charging cable into the charging jack on the back/bottom of the remote.
2. Plug the other end into a USB power source. The red charging indicator illuminates. The green indicator illuminates when the remote is fully charged.

Battery Saver

Your remote control saves charge by automatically turning off if any key is pressed for more than 15 seconds. This saves your charge should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

IMPORTANT!


This remote is already programmed to operate most Samsung TVs, DVD and Blu Ray players, Comcast cable boxes, Roku streaming players, and JBL audio products. Just press the corresponding key—DVD/B RAY for a DVD or Blu Ray player, TV for a television, SATELLITE/CABLE for a cable box, STREAM 1 or STREAM 2 for a streaming player, or AUDIO/SOUNDBAR for an audio device or soundbar.

This remote also supports control of CEC enabled RF devices, like the Amazon Fire TV Stick, Google Chromecast, and Roku Stick, via HDMI CEC connection. For this control you don't need to program the remote for the RF device, just for the TV. Consult your TV's owner's manual for instructions on enabling HDMI CEC control.

Step 2: Program your remote

To use this remote with your streaming player and TV, first you need to program it to control your devices. There are three ways you can program the remote to operate your devices. Try them in the order listed:


- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device.
- The **Auto Code Search: Top Brands** searches through the codes for select brands of devices.
- The **Auto Code Search: All Brands** goes automatically through all the codes for the device you're trying to control.

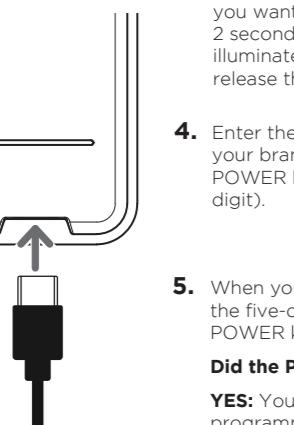


Direct Code Entry

Direct Code Entry lets you enter a code from the accompanying code list for your brand of device.

 
1. Manually turn on the device you want to control.




2. Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.

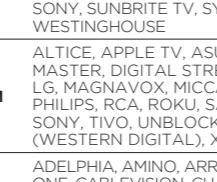


3. Press and hold the device key you want to program for about 2 seconds, until the POWER key illuminates and stays on. Then release the key.

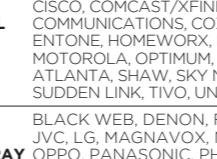

4. Enter the first five-digit code for your brand in the code list (the POWER key flashes after each digit).

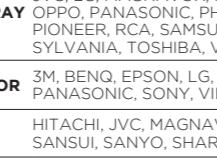

5. When you've finished entering the five-digit code, look at the POWER key.

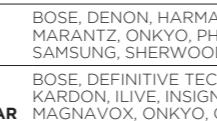

Did the POWER key turn off?

YES: You're done! You've programmed this device key.










NO, it's still illuminated: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 4 again.

NOTES

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code in the list.

Remember to enter the code for future reference in the box provided in the Code Retrieval section of this manual.






If your brand isn't listed in the code list, use the Auto Code Search method to program the remote control.

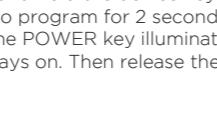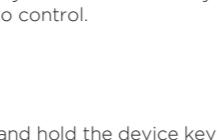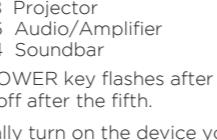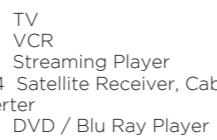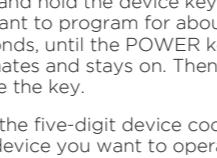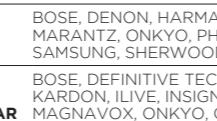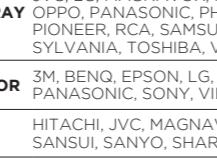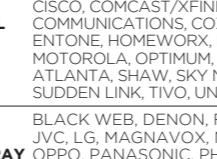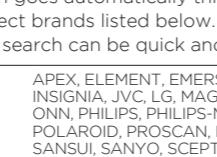

Auto Code Search: Top Brands

This search goes automatically through all device codes for the select brands listed below. If your brand of device is listed, this search can be quick and easy.



 
 
 
 
 
1. Manually turn on the device you want to control.



Auto Code Search: All Brands

This search goes automatically through all device codes for the select brands listed below. If your brand of device is listed, this search can be quick and easy.

       1. Manually turn on the device you want to control.



Notes

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to.

The remote starts sending the on/off command for a new code every 2 seconds.

Channel Lock

Channel lock automatically sends channel commands, like the CH and 0-9 number keys, to your satellite receiver, cable box, or digital TV converter when you're in TV mode. This can save you keypresses if you use a device other than your TV to change channels.

When your device turns off:

Press the **■** key to store the code. You're done! You've programmed this device key.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote.

If some device features don't work, go to the next step to try a different code.

2. Repeat the search from step 3.

3. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

IMPORTANT

The shortcut keys mimic the functionality of your device's original remote — for example, if the original remote that came with your SmartTV doesn't have a YouTube key, chances are this remote's YouTube key will not automatically give you direct access to YouTube on your SmartTV. You can, however, set up a macro on that key to perform this function. See the "Testing the Code for Maximum Functionality" section below for more information.

Problem: The remote can't be programmed to operate your device.

If you are testing the remote while programming it, you may be too far away from the device or at a wrong angle. There must be an unobstructed path between the remote and the IR sensor on the device. Move closer and make sure you point the remote at the device you're trying to control.

If you're using the Direct Entry programming method to enter the codes for your brand and the unit is still not functioning properly, try one of the automatic search methods.

Because this remote controls more than one device, you must first "tell" the remote which device you wish to operate. That means, if you wish to operate your TV, you must first press the TV key to put the remote in the TV Mode. The remote stays in that device mode until you press a different device key. For example, if your remote is in TV Mode and you want to operate the DVD player, you must press the DVD/B RAY key to change device modes.

Turn channel lock on:


Press and hold the device key you want to use to change channels for about 2 seconds until the POWER key illuminates. Then release the device key.

2. Press the CH + key once. The POWER key flashes once and remains on.

3. Press OK to lock channel commands to this device. The POWER key flashes twice and turns off.

TO RESET THE REMOTE:

Find the reset port on the back of the remote, toward the bottom and in the middle of the back. Unbind a paper clip and insert it into this hole until you reach the reset button on the inside of the remote. Press for 2-3 seconds to reset the remote. You will need to recharge the remote and reprogram it to control your devices.

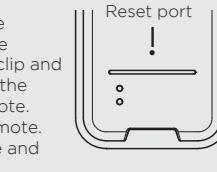

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking nice.
- Modifying or tampering with the remote's internal devices can cause malfunction and invalidate its warranty.

Ecology

Your product must be disposed of properly according to local laws and regulations. Because this product contains a rechargeable battery, the product must be disposed of separately from the household waste.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Limited Lifetime Warranty

Voxx Accessories Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This warranty does not cover product purchased, serviced or used outside the United States or Canada. This warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

Problem: The device's menu does not appear on the TV screen.

- Make sure you have connected the device to your TV properly and conditions, the remote key will not work.
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE/CABLE, STREAM 1 and 2, DVD/B RAY, AUDIO/SOUNDBAR). This tells the remote which device to operate.
- Press the OK key after you enter a channel number.
- Remove any obstacles between the remote and the device. Make sure to aim the remote at the IR sensor on the device.

Problem: The device's menu does not appear on the TV screen.

- Make sure you have connected the device to your TV properly and conditions, the remote key will not work.
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE/CABLE, STREAM 1 and 2, DVD/B RAY, AUDIO/SOUNDBAR). This tells the remote which device to operate.
- Press the OK key after you enter a channel number.
- Remove any obstacles between the remote and the device. Make sure to aim the remote at the IR sensor on the device.

Problem: The remote's shortcut/macro keys don't work as expected.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE/CABLE, STREAM 1 and 2, DVD/B RAY, AUDIO/SOUNDBAR). This tells the remote which device to operate.
- The shortcut keys mimic the functionality of your device's original remote — for example, if the original remote that came with your SmartTV doesn't have a YouTube key, chances are this remote's YouTube key will not automatically give you direct access to YouTube on your SmartTV. You can, however, set up a macro on that key to perform this function.

Advanced Volume Lock lets you lock volume controls to a different component, like a soundbar or audio receiver.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE/CABLE, STREAM 1 and 2, DVD/B RAY, AUDIO/SOUNDBAR). This tells the remote which device to operate.
- Remove any obstacles between the remote and the device. Make sure to aim the remote at the device's IR sensor.
- Press VOL+ once. The POWER key flashes once and remains illuminated.
- Make sure the remote is charged. Insert the charging cable into the charging port on the bottom of the remote. Plug the other end of the cable into a USB power source, like a computer or USB adapter (not included). The red indicator on the back of the remote illuminates while the remote is charging. The green indicator turns on when the remote is fully charged.

For more information, including instructional videos, remote programming codes, and customer support, visit www.TERKCodeSupport.com

TKTC6GB

Manual del propietario
del control remoto universal

Owner's Manual (English on back)

Paso 1: Cargue el control remoto

Antes de comenzar a utilizar el control remoto, se recomienda cargarlo por completo.

Para cargar el control remoto:

- Conecte el cable de carga en el conector de carga ubicado en la parte inferior/posterior del control remoto.
- Conecte el otro extremo a una fuente de alimentación USB. Se encenderá el indicador de carga roja. Cuando el control remoto esté completamente cargado, se encenderá el indicador verde.

Ahorro de Batería

El control remoto universal ahorra la potencia de la batería al apagar automáticamente cualquier tecla que se oprime por más de 15 segundos. Esta acción prolonga la vida útil de la batería en caso de que el control remoto quede pillado en un lugar donde las teclas permanezcan oprimidas, tal como entre los cojines de un sofá.

IMPORTANTE!


Este control remoto ya está programado para funcionar con la mayoría de los televisores, reproductores de DVD y Blu Ray Samsung, aparatos de cable Comcast, y otros reproductores de streaming Roku. Simplemente oprima la tecla correspondiente: DVD/B RAY para un reproductor de DVD, TV para un televisor, SATELLITE/CABLE para un aparato de cable, STREAM 1 o STREAM 2 para un reproductor de streaming, AUDIO/SOUNDBAR para un dispositivo de audio o barra de sonido.

Este control remoto también admite el control de dispositivos RF compatibles con CEC, como Amazon Fire TV Stick, Google Chromecast y Roku Stick, a través de la conexión CEC HDMI. Para este control, no necesita programar el control remoto para el dispositivo RF, solo para la TV. Consulte el manual de usuario de la TV para obtener instrucciones sobre cómo activar el control CEC HDMI.

Paso 2: Programe el control remoto

Para utilizar este control remoto universal con su sistema de entretenimiento en el hogar, necesitará primero programarlo para manejar sus dispositivos. Para programar el control remoto universal para manejar sus dispositivos, utilice uno de los tres métodos a continuación. Intente cada una de ellas en el orden indicado.


- La Entrada Directa de Códigos** le permite ingresar un código de la lista de códigos suministrada para la marca de su dispositivo.
- La función Búsqueda automática de códigos: principales marcas** realiza la búsqueda por los códigos para determinadas marcas de dispositivos.
- La función Búsqueda automática de códigos: todas las marcas** explora automáticamente todos los códigos para el dispositivo que está intentando controlar.

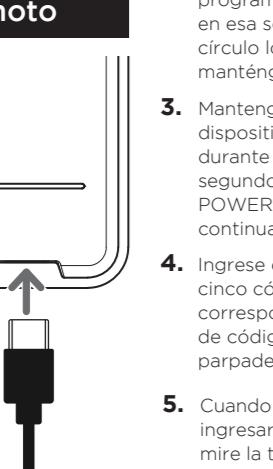

Entrada Directa de Códigos

La Entrada Directa de Códigos le permite ingresar un código de la lista de códigos suministrada para la marca de su dispositivo.

 
- Encienda manualmente el dispositivo que desea manejar.



- Encuentre la Lista de Códigos suministrada con el control remoto. Encuentre la sección para el tipo de dispositivo que desea programar, y localice la marca en esa sección. Marque con un círculo los códigos para la marca y manténgalos a mano.



 - Mantenga oprimida la tecla de dispositivo que desea programar durante aproximadamente 2 segundos hasta que la tecla POWER permanezca encendida. A continuación, suelte la tecla.



- Ingresé el primer código de cinco dígitos para la marca correspondiente en la lista de códigos (la tecla POWER parpadea después de cada dígito).



- Cuando haya terminado de ingresar el código de cinco dígitos, mire la tecla POWER.

¿La tecla POWER se apagó?

Sí: ¡Todo listo! Programó esta tecla de dispositivo.

 
 
 
 
 
 
 
 
 

No, sigue encendida: Ingresó un número de código que no está en las listas de códigos o lo faltó un paso en el procedimiento de ingreso de código. Pruebe el paso 4 nuevamente.

NOTAS

Pruebe el control remoto con el dispositivo para asegurarse que la tecla de dispositivo esté programada con el código correcto y garantizar así su máxima funcionalidad. Si no puede utilizar alguna de las funciones, intente con otro código de la lista.

Recuerde ingresar el código para referencia futura en el recuadro provisto en la sección Recuperación de Códigos de este manual.


Si la marca del dispositivo no está en la lista de códigos, utilice el método de búsqueda automática de códigos para programar el control remoto.

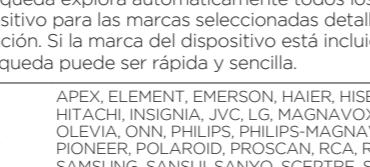


Búsqueda automática de códigos: principales marcas

Esta búsqueda explora automáticamente todos los códigos de dispositivo para las marcas seleccionadas detalladas a continuación. Si la marca del dispositivo está incluida en la lista, esta búsqueda puede ser rápida y sencilla.

- Apunte el control remoto directamente hacia el panel frontal del dispositivo que desea controlar. Oprima la tecla POWER en el control remoto.

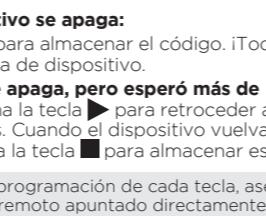

 - Oprima la tecla POWER para almacenar el código. ¡Todo listo!




- El control remoto comienza enviando el comando de encendido/apagado para obtener un nuevo código cada 2 segundos.




- El indicador verde se enciende cuando el control remoto está completamente cargado.



 - NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



 - NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.




- NOTAS: A través de la programación de cada tecla, asegúrese de mantener el control remoto apuntado directamente al sensor infrarrojo del dispositivo que está actualmente programado con el control remoto.



Cuando el dispositivo se apaga:


Oprima la tecla para almacenar el código. ¡Todo listo!

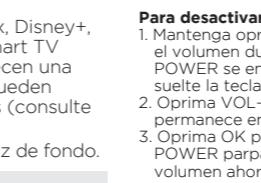

Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.




Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.




Para desactivar el bloqueo de volumen avanzado:


Oprima la tecla para almacenar el código. ¡Todo listo!

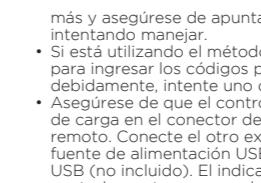

 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 
Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



 Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.



Oprima la tecla para retroceder a los últimos códigos. A continuación, suelte la tecla.

