

# TERK Quick Start Guide

Check out setup videos at

[www.TerkAntennaHelp.com](http://www.TerkAntennaHelp.com)

## 1 Use the Terk Signal Finder App to find the best location for your antenna.



In the Google Play or Apple App Stores, search for “Terk Signal Finder” and look for the icon shown here. Then download and install the App.



Launch the App and follow the directions there to find the best location and orientation for your antenna.

### Antenna Placement Tips


- ✓ Avoid metal surfaces (like a metal stand).
- ✓ Move the antenna close to or in a window.
- ✓ Position the antenna as high as possible.

## 2 Attach the antenna stand to the antenna (2 options).

Flat/wallmount -OR- Upright

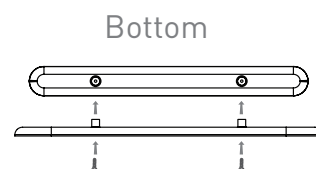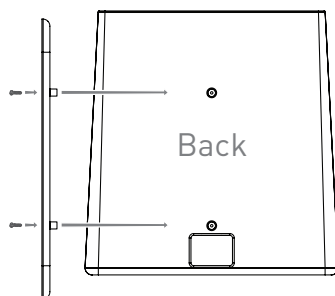


## 3 Connect the antenna to the provided amplifier insert.

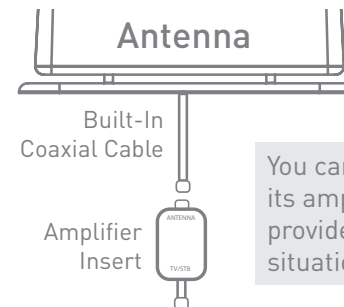

**IMPORTANT:** Don't plug the amplifier insert's power cord into a power outlet yet.

You can use this antenna with or without its amplifier. Try with the amplifier first—it provides the best performance in most situations.

## 4 Connect the amplifier insert to your TV or digital converter box.

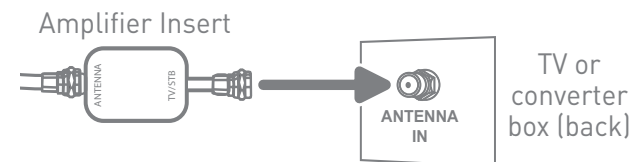

**IMPORTANT:** Make sure your TV is turned off.

## 5 Plug in the amplifier's power cord to a power outlet.

## 6 Scan for channels on your TV.

Most TVs have a channel scan option in their menu system, many times in a SETUP or CHANNEL menu under ANTENNA. For detailed instructions on performing a channel scan, see the owner's manual that came with your TV. **Important:** You must perform a channel scan to receive any channels!

# STOP!

**DO NOT RETURN** this product to the store!  
Visit [TerkAntennaHelp.com](http://TerkAntennaHelp.com) for instructional and how-to videos.

# TERK Guía de inicio rápido

Consulte los videos de configuración en [www.TerkAntennaHelp.com](http://www.TerkAntennaHelp.com)

## 1 Use la aplicación Terk Signal Finder para determinar la mejor ubicación para su antena.



En las tiendas Google Play o Apple App, busque "Terk Signal Finder" y el icono que aquí se muestra. Ahora descargue e instale la aplicación.


Abra la aplicación y siga las instrucciones para determinar la mejor ubicación y orientación para su antena.

### Consejos para la ubicación de la antena

- ✓ Evite las superficies de metal (tal como un soporte de metal).
- ✓ Coloque la antena en una ventana o cerca de ella.
- ✓ Coloque la antena lo más alto posible.


## 2 Fije la antena en el soporte de la antena (2 opciones).

Montaje en pared / Plana

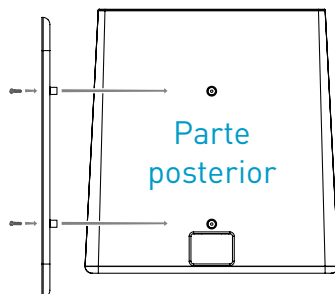


- 0 -

Vertical

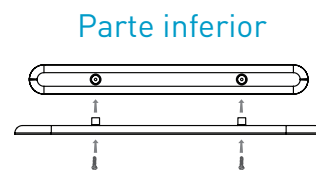


## 3 Conecte la antena al inserto para amplificador suministrado.

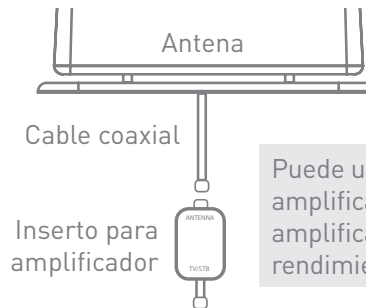

**IMPORTANTE:** No enchufe todavía el cordón de alimentación del amplificador en un tomacorriente.

Puede usar esta antena con o sin el amplificador. Intente primero usar el amplificador ya que éste provee el mejor rendimiento en la mayoría de las situaciones.

## 4 Conecte el inserto para amplificador al convertidor digital o al televisor.

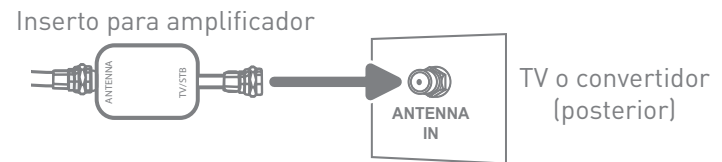

**IMPORTANTE:** Asegúrese que el TV esté apagado.

## 5 Enchufe el cordón de alimentación del amplificador en el tomacorriente.

## 6 Busque canales en su TV.

La mayoría de televisores tienen una opción de búsqueda de canales en el menú del sistema, con frecuencia se encuentra en el menú de CONFIGURACIÓN o CANALES en la sección ANTENA. Para obtener instrucciones detalladas sobre cómo llevar a cabo una búsqueda de canales, consulte el manual del propietario incluido con el TV. **Importante:** ¡Debe realizar una búsqueda de canales para recibir los canales!

# ¡ALTO!

**NO DEVUELVA** este producto a la tienda. Visite [TerkAntennaHelp.com](http://TerkAntennaHelp.com) para videos de instrucciones y prácticos.